



# Adjustment of Pinking Scissor Positioning Block

The scissor positioning block has been preset by the factory so that 1005, 1608, 2012, 3216 components will not be damaged when cutting carrier tape.


However, should the cut position have inadvertently moved during transit, please refer to figures ① and ② below to re-adjust the positioning block back to its original factory setting.

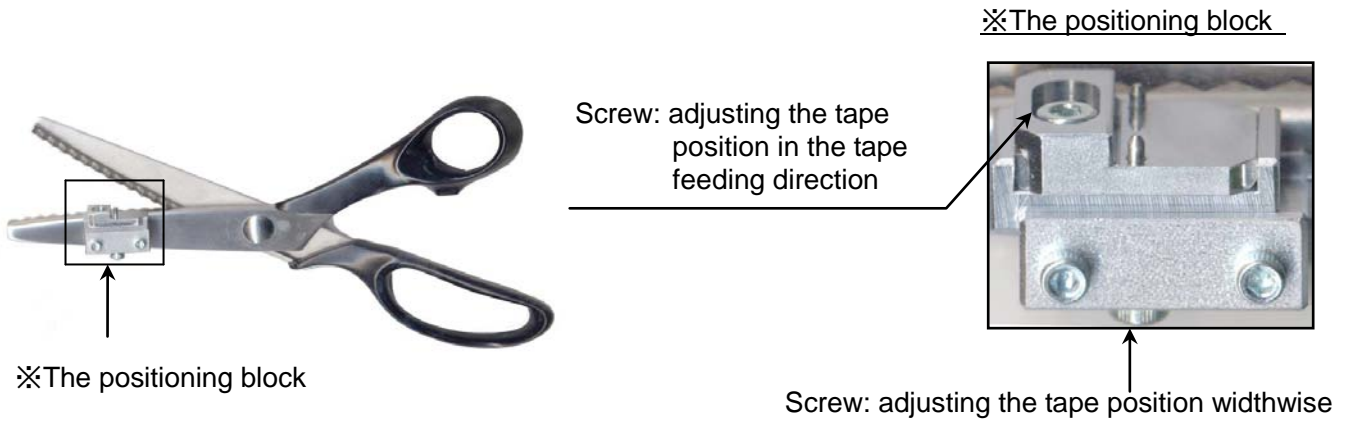

## ① Adjusting the tape position widthwise

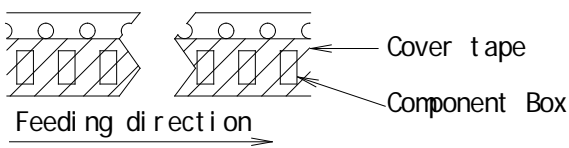



### Move to widthwise direction

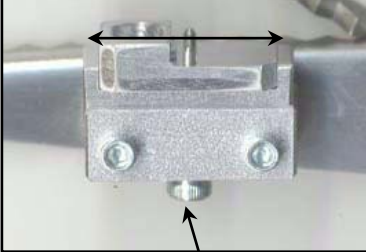


Screw

Loosen the screw that is in the back side of the block so that the block is able to move back and forth. Adjust the block to position the top sharpened point of the scissors edge to the center of the component box, then tighten the screw to fix.

## ② Adjusting the tape position in the tape feeding direction

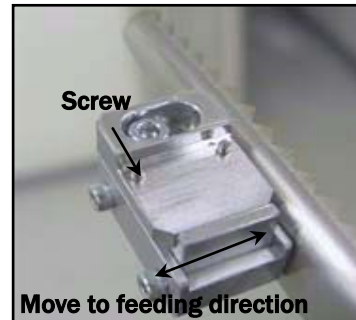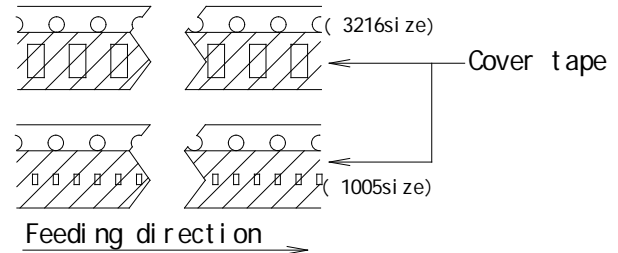

Loosen the screw that is in the front side of the block so that the block is able to move from side to side. Adjust the block position as shown in the above figure, then tighten the screw to fix.

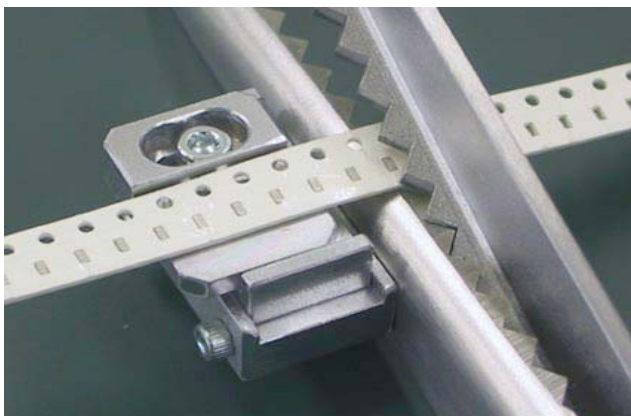

## Pinking Scissors PKS-008 for 8mm tapes

### Mid America (UK) Ltd

Hill House, Rockfield, Tain, IV20 1RF, Scotland

Tel: 44 1862 871 555

Fax: 44 1862 871 666

Mob: 44 7973 851 944

email: [mauk@btconnect.com](mailto:mauk@btconnect.com)

Web: [www.mauksmt.com](http://www.mauksmt.com)

