


Joining 8mm Carrier Tapes with Fuji Joint Tape FC8B


- ① Keep the cover tape upside, insert pins of scissors into the tape feeding holes of the carrier tape, and cut the tape along with components.

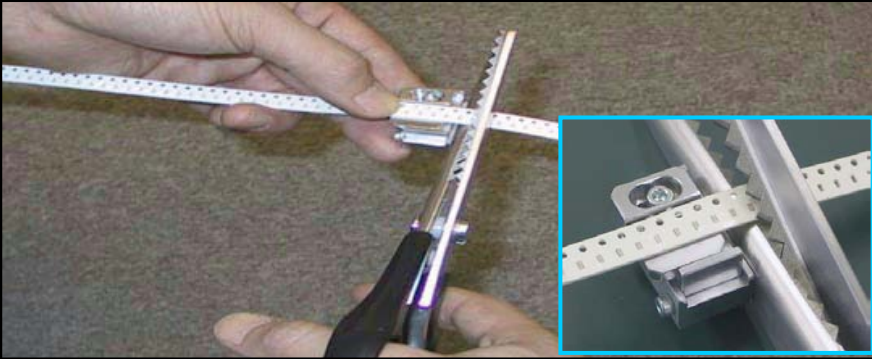


- ② Separate from a positioning guide of the Joint Tape by hand.




- ③ Bend the Joint Tape once along the bending line.

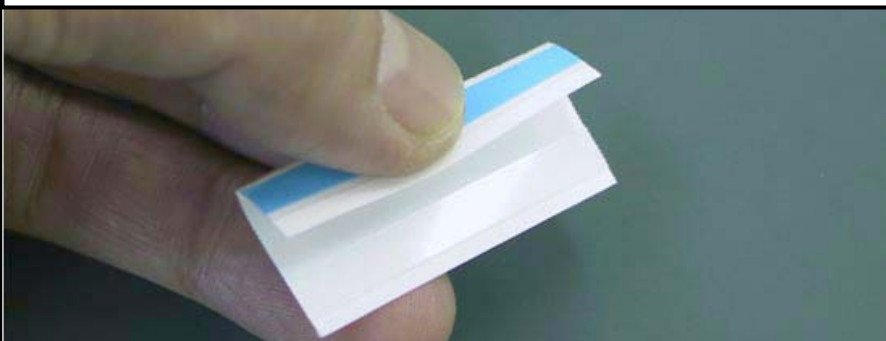

- ④ Peel off a white cover of the Joint Tape up to a positioning guide.

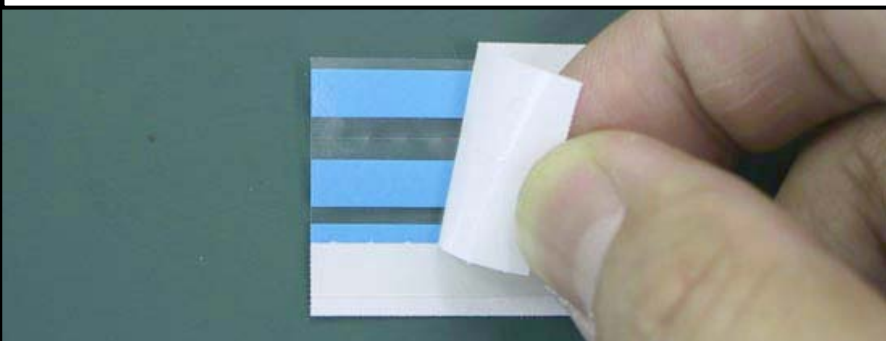


- ⑤ Set one of the two separated tapes on the positioning guide, and stick the cover tape downward.
(A row of feeding holes must be along a guide line.)

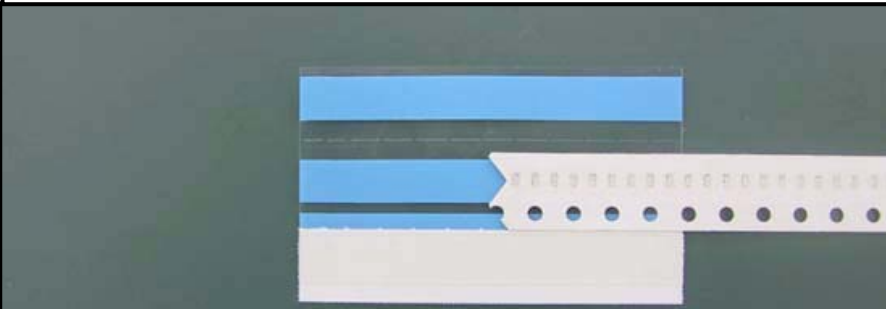


Note:

- ※ Release-agent coating onto the cover tape may cause to weaken tape joint adhesiveness.
Use a proper release-agent if coating required
- ※ When used for emboss carrier tapes, apply the joint tapes for better joint stabilization after lifting the cut ends of the cover tape as sketched.


- ⑥ Set another one of separated tapes so as the section of both tapes are fit.

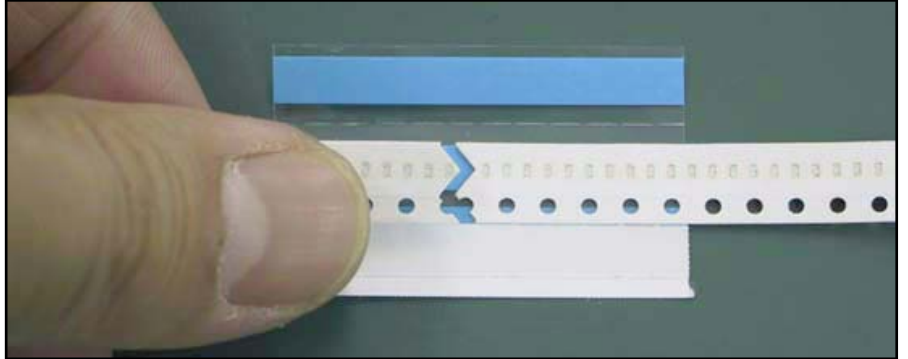


- ⑦ Bend the Joint Tape along a bending line.

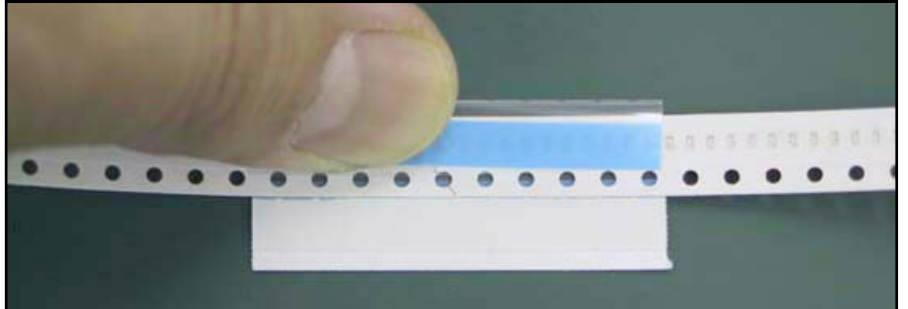


- ⑧ Peel a white cover and a positioning guide of the Joint Tape.

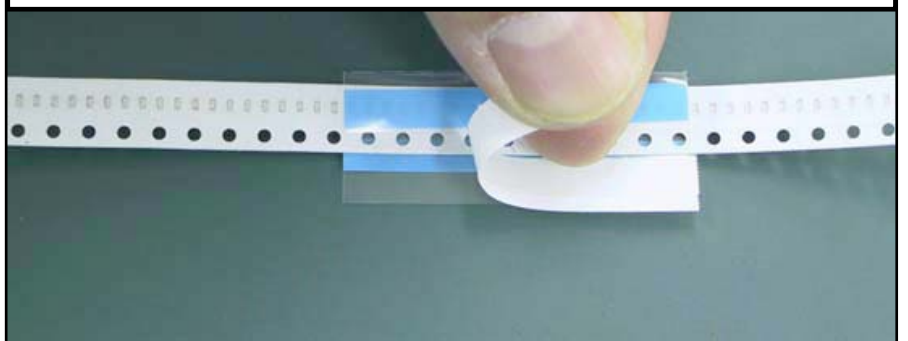

- ⑨ Rub the entire part of the Joint Tape with your finger to connect tapes completely and peel a transparent tape of the Joint Tape.

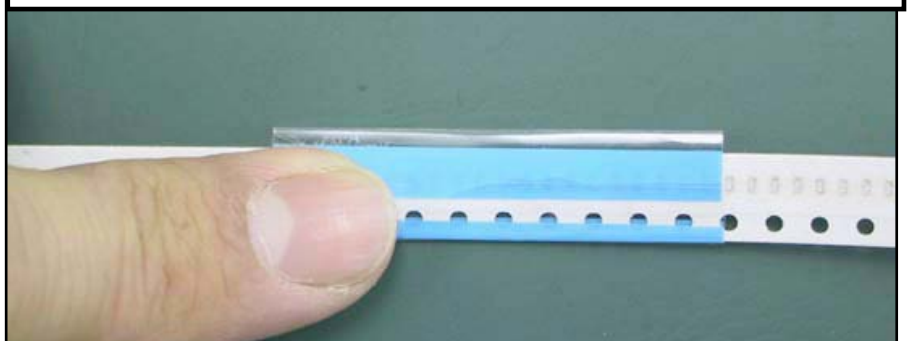

- ⑩ All completed.
※Be sure a blue tape sticks completely to the carrier tape base.

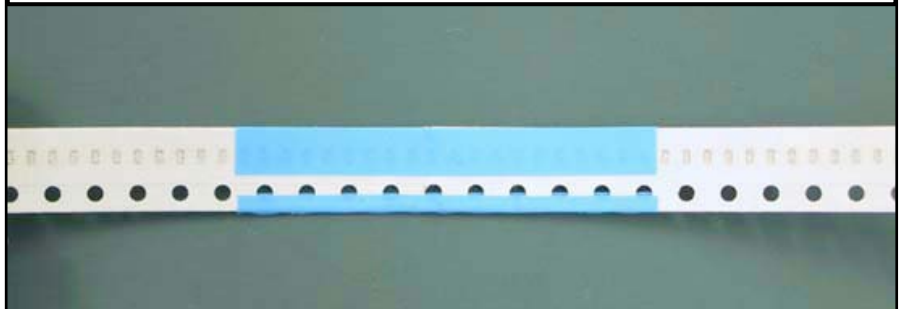

Sold throughout Europe & USA by:

Mid America (UK) Ltd

Hill House, Rockfield, Tain, IV20 1RF, Scotland, United Kingdom.

Tel: 44 1862 871 555

Fax: 44 1862 871 666

Email: mauk@btconnect.com

www.mauksmt.com